

To-Do List



All bolts must be tightened with torque.



Check that the wires do not get stretched or "break".



Lubricate it with fat.



Check tilt functions before driving off the machine.



Contact Compacttilt when you are at the machine – and not when you have driven from there.

Compacttilt CT2-CT3-CT6-CT10 (hydraulic quickcoupler), for diggers in class 2 to 10 Ton

Installation: Take notice of the following

1. Mounting pin bolts - ensures that the correct spacers between the bracket and the plug arm fit. I.e. there is minimal play between the plug arm and the tilt bracket. If the machine manufacturer prescribes an O-ring between the plug arm and the machine mount, this must be fitted.
2. NOTE the models that have the included sims must be turned against the plug arm.
3. The outer protective screen on the machine screen must be fitted as it is part of the tilt construction. NOTE hydraulic supply to the tilt motor that this does not go on the plug arm or meat bone.
4. Lubrication: Always remember to lubricate both lubrication nipples

Tests are always carried out after installation and service tasks:

The tilt is tilted to full clearance to the right, whereupon the bucket function is opened and closed completely to check that hoses do NOT get caught. Then perform when the tilt is in neutral and tilt to the left.
