

# COMPACTTILT™



## USER MANUAL INSTRUCTIONS PRODUCT INFORMATION

### CT1-1 V1.2024

Patent no.: PCT/DK2016/050047



## Congratulations on choosing Compacttilt!

We are happy that you have chosen our product - and look forward to it working for you.

Here at Compacttilt, we develop and create products based on the vision of creating the best user experiences. Therefore, it is also important for us that you remain satisfied with your Compacttilt product, and if something unexpected arises or questions - contact us or your machine dealer.

Compacttilt products are our own development and is manufactured in Compacttilt's factory in Denmark. This means that each part of the product is engineered based on our vision of what supplies the best tilt product. But we cannot avoid the fact that maintenance and correct use of the product is the way forward, for full utilization of the product's lifetime. Therefore, read this instruction and perform the maintenance according to the regulations.

Again, congratulations on your choice of Compacttilt. We look forward to a long and good cooperation. Just contact us for more information.

Daniel Duus,  
CEO and Product Engineer  
Compacttilt.dk

*Compacttilt is a patented and protected product: The full ownership of all intellectual property rights regarding the product's manufacture, design, trademarks and copyrights, belongs to Compacttilt ApS.*

## EF- Declaration of conformity

According to The Machinery Directive 2006/42/EF, Appx. IIA



### Manufacturer:

Compacttilt ApS  
Fabriksvej 5  
5580 Nørre Aaby, Danmark  
Tlf.: +45 6442 2080

Hereby declare that the following equipment:

Product: Compacttilt™  
Type: CT1

Serie no \_\_\_\_\_

Year: \_\_\_\_\_

Complies with the following directives:

2006/42/EC Machinery Directive

The following harmonized standards have been applied:

DS/EN ISO 12100:2011 Machine safety - General principles of construction - Risk assessment and risk reduction

DS/EN ISO 4413:2010 Hydraulics - General rules and safety requirements for systems and their components.

DS/EN 474-1:2022 Earthmoving machines - Safety - Part 1: General requirements

ISO 13031:2016 Earth-moving machinery - Quick couplers - Safety

DS/EN ISO 13849-1:2023 Safety of machinery - Safety related parts of control systems - Part 1: General principles of construction

Place / Date

December 2023  
\_\_\_\_\_

Name/Title Maria Gade, Administrator

Signature

\_\_\_\_\_  
The undersigned is the representative for the collection of the technical dossier

## Certificate: Lifting Hook

Regarding use and limitations look further down the manual.



<b>TEST CERTIFICATE</b>		<b>H-LIFT INDUSTRIES CO.,LTD.</b>			
		8/F., No. 560 Jincheng Road, Xiaoshan, Hangzhou, 311202, China Tel + 86-571-8263-6008, Fax + 86-571-8263-6028 http://www.h-lift.com E-mail: info@h-lift.com			
		CERTIFICATE NO.		ZS-14319-029	
YOUR P/O NO.:		00059679-2	INVOICE NO.		14HC319
(1) Description of Gear					
GRADE 80 WELD ON HOOK TESTING ACCORDING TO EN 1677 MATERIAL: ALLOY STEEL					
(2) PRODUCT CODE	(3) SIZE(t)	(4) QUANTITY (pcs)	(5) WORKING LOAD LIMIT(WLL)	(6) MIN. BREAKING FORCE (BF)	(7) MARKING
8-WOH-01	1	50	1t	49kN	WLL1T CE
8-WOH-02	2	100	2t	98kN	WLL2T CE
8-WOH-03	3	120	3t	147kN	WLL3T CE
8-WOH-05	5	40	5t	245kN	WLL5T CE
8-WOH-08	8	20	8t	392kN	WLL8T CE
I hereby certify that the item described in this certificate was tested and thoroughly examined and that the above particulars are correct.					
TEST RESULT		CERTIFIED BY:			
Pass <input checked="" type="checkbox"/>	Fail <input type="checkbox"/>	AUTHORISED SIGNATORY:			
		DATE (dd/mm/yy):			



Add: 8/F., No. 560 Jincheng Road, Xiaoshan, Hangzhou, 311202, China

Tel: +86-571-8263-6008 Fax: +86-571-8263-6028 http://www.h-lift.com Email: info@h-lift.com

## Content

Safety Regulations .....	5
Compacttilt: purpose and function .....	5
Restrictions on use .....	5
Before Use .....	5
Before Daily Use .....	5
Regular security checks .....	6
Safety instructions .....	7
Warning – Prohibition - Reminders .....	7
Moving the product .....	8
Disposal .....	8
Cessation of use and disassembly .....	8
Scrapping .....	8
Technical data Compacttilt .....	9
Installation .....	10
Before start of installation .....	10
Installation .....	10
Inspection for unwanted contact between machine and coupler .....	11
Hydraulic Installation .....	12
Connection tilt .....	12
Inspection of installation: .....	12
Steering range - Compacttilt .....	13
Use of semi-automatic quick coupler .....	13
Connection of equipment .....	14
Lifting Hook - Use and limitations .....	14
Maintenance .....	15
Lubrication overview .....	16
Spare part list .....	16

## Safety Regulations

This instruction manual must be thoroughly read by any user of the Compacttilt before use. The Compacttilt may only be used for the purposes described in this manual. Compacttilt is a hydraulic quick-coupling equipment that connects the carrier with an implement - therefore user instructions and safety instructions from these two products must always be understood and complied with before the product is used.

## Compacttilt: purpose and function

To give the excavator increased flexibility, so as the Compacttilt is mounted between an excavator's arm and an attachment such as a shovel. Compacttilt adds the function that the attachment can be tilted.

NOTE: The weight of the Compacttilt and the increased range can lead to impaired stability which in the worst case can lead to personal or property damage.

The Compacttilt is only for use in implements intended for excavators and must not be used for other purposes.

## Restrictions on use

The Compacttilt is only intended for use with digging implements. It is not recommended to use the Compacttilt for oil hammer / hydraulic hammer, as it significantly reduces the service life of the Compacttilt.

Compacttilt must not be used with a crane arm, for transporting or lifting people.

## Before Use

- This instruction only involves the Compacttilt - the safety information described will at all times depend on the carrier, where the applicable safety instructions and lifting graphs for the carrier as well as any other equipment, are to be read and understood at all times before commissioning and subsequently complied with.
- It is ensured that the information in the declaration of conformity corresponds to the information plate mounted on the Compacttilt. If there are deviations, contact the supplier immediately before carrying out the installation.
- Make sure that the hydraulic system is depressurized before you start working on the system.
- It is strictly forbidden, at any time, that:
  - Stay under the Compacttilt.
  - To influence, sabotage or manipulate the Compacttilt using 3rd party objects.
  - To use the Compacttilt for other machine types than the specific one for which it is manufactured, cf. the type plate.

## Before Daily Use

- The mounting points are safety components that require regular inspection and adjustment. In the event of signs of wear or cracking, the Compacttilt must not be used.
- Always follow the instructions and pay attention to the personal and environmental instructions in the data sheet that comes with hydraulic oil and grease.
- Never use your hands to check for leaks in the hydraulic system - there is a risk of personal injury.
- When mounting the Compacttilt and / or tool holder, check the limits for tip load.
- Implements connected to the Compacttilt may only be used if the locking has been carried out correctly.
- Never use the Compacttilt on a damaged or defective machine or bucket.

- Never try to increase the maximum capacity of the machine.
- Always replace damaged or unreadable labels and warning signs before using the machine.
- Always insulate electrical conductors and components when installing electrical equipment.
- There is a risk of burns when in contact with hot hydraulic oil.
- The implement lock may only be deactivated when equipment is to be disconnected from the product.
- There is a risk of crushing with moving parts.
- When lifting, use a lifting hook for lifting to the extent that the excavator is approved for.
- If you have any doubts about use and safety instructions, contact your dealer or the manufacturer of the Compacttilt.
- Be extremely careful when handling long objects due to forces due to “live/movable weight” and the increased risk area. Risk of personal injury and property damage.
- The Compacttilt must not be used beyond the maximum capacity.
- It is not permitted to manipulate or otherwise change the installation and / or function of the Compacttilt.
- Maintenance and repair may only be performed by professionally trained personnel.
- Assembly and installation may only be carried out by an authorized workshop.
- Do not start the tool without:
  - The tool is set correctly, including the mechanical locking device is set correctly.
  - It is ensured that hoses, hydraulics etc. does not bother the Compacttilt and its features.
  - The operator and the third party are not under the tool and / or in the working area of the tool, where the hazardous squeezing situation may occur.
  - Be aware of wear on hydraulic hoses. If damaged, make sure to replace.

## Regular security checks





- Inspection of hydraulic hoses, fittings, pipes, joints, bushings and bolts.
- Inspections of welds and suspensions.
- Inspections of fork wear.
- Inspections of lock.

**The manufacturer requires inspection of the products mounting and installation.  
The manufacturer requires inspection of the quick coupler locking component.  
If damage occurs, contact Support.**











## Safety instructions

- Only trained personnel and operators are allowed to operate the product.
- The machine bracket must be properly mounted. Any irregularities must be reported and fixed.
- All operators must be registered by the person in charge of the excavator.
- During maintenance all moving parts must be in a locked position.
- During maintenance the manufacturer demands that the operator uses correct safety equipment

			
<p><b>High pressure fluid</b></p> <p>The pump generates high pressure fluid. Never check for leaks with a hand or other body part. Always drain pressure before working on the hydraulic system</p>	<p><b>Safety glasses required</b></p>	<p><b>Wear safety boots</b></p>	<p><b>Keep in safe distance from hazard</b></p>

## Warning – Prohibition - Reminders


-  This manual must be available immediately at the machine. If this is not possible, the machine must clearly mark where the manual is stored.
-  Other rules, established by national or other authorities or by the company itself, must be observed. If these are violated, the manufacturer and his representative disclaim any responsibility for damage to persons or material.
-  The machine must be operated in accordance with the instructions and instructions given in this and the other instructions that together constitute the operating instructions for the machine.
-  This manual must be read before using the machine.  
All operators and others who must operate the machine must review this manual before working on the machine. By operators is meant all persons working at the machine, both operators and employees who are engaged in e.g. unloading and loading, cleaning, maintenance etc.
-  Only those persons who need it as part of their work may access the machine. If it is necessary to provide access to the machine for persons unfamiliar with the function (eg. during repairs, visits or demonstrations), this must be done under the pre-determined safety precautions. The person responsible for the operation of the machine must be informed of the presence of strangers.
-  Operators and repairers who are to operate or work on the machine must undergo training in the use of the machine before the work may take place. The manufacturer carries out the necessary training of operators and repairers when handing over the machine.
-  If the safety instructions are ignored by the user, the manufacturer and his representative disclaim all responsibility.
-  If the user changes, disassembles or adds to the original design, mechanical shielding, electrical safety, pneumatics, hydraulics, as well as functions related to the original design, the manufacturer's CE marking lapses.



## Moving the product

Always ensure that there are no objects, persons or third-party objects under the product, or with the risk that it may interfere with the movement.

When moving, use correct lifting devices, e.g. truck or crane. Always remember to ensure that the product is properly secured during the move. It is the user's responsibility that lifting straps, or lifting chains, are safety approved for the weight of the product. For truck transport, machine parts must be secured with straps. For crane lifting, lifting chains / straps must be designed for the weight.

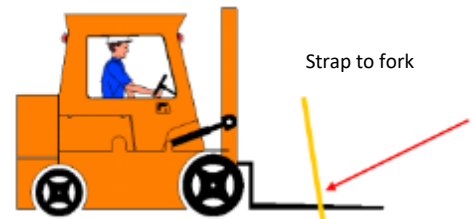

## Disposal

### Cessation of use and disassembly

- The equipment must not be pressurized during disassembly and must be drained of oil.
- A plan for disassembly must be prepared. The plan must include a risk assessment for the work and for disposal of the Compacttilt Rotator / machine part.
- Plan and risk assessment must be prepared in accordance with applicable rules at the time of dismantling.



### Scrapping

The product is dismantled and sorted into categories that require in applicable environmental requirements. The product is subject to valid version of: Directive 2008/98/EC on waste.

When the product is obsolete, all the components that make up the product must be sorted and handed in at an approved recycling site or conducted by an approved recycling company.

The product must not be disposed as unsorted household waste. Use the local WEEE collection points for the disposal of electrical components of this product and make sure that all relevant regulations are observed.



The product consists of the following materials and must be sorted accordingly:

- Iron
- Aluminum
- Plastic (hard & soft)
- Rubber
- Oil & grease
- Electrical components
- Copper
- Other metals

If parts of the product is resold for purposes other than disposal, it is the owner's responsibility to make the recipient aware of the disposal rules.

## Technical data Compacttilt

Data/Compacttilt	CT1
Max machine weight of the digger	1.200 kg
Min. installation height [H]	160mm
Width [B]	148mm
Length [L]	174,2mm
Weight	18 kg
Total tilt angle	100°
Tilt angle [Tilt]	2x50°
Max. hydraulic pressure [MPa]	22
Recommended hydraulic flow [L / min]	2-4
Torque [Nm at 210bar]	2035
Type of semi-automatic coupler	S30
Max. digging torque [kNm]	13,9
Max. Break out torque [kNm]	6,9
* Max. Digging and breaking torque is calculated in relation to the following bucket size. Width height	500/550

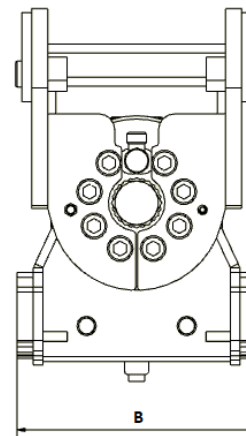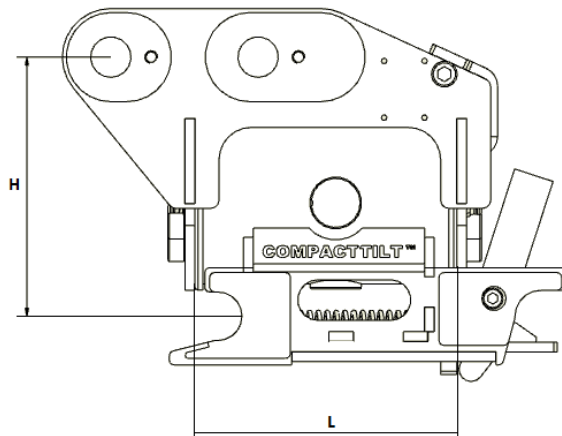

## Installation

Documentation for the carrying machine must be available and read before installation. In the following it's described how to mount the Compacttilt equipment directly on the machine.

If the Compacttilt is mounted on a quick coupler you have to use the carrying machine documentation.

**Note:** Assembly and installation may only be carried out by workshops approved by the manufacturer. Do not make any changes to the assembly without the manufacturer's permission. Workshops approved by the manufacturer are dealers with their own workshop, unless otherwise stated in the delivery of the Compacttilt.

## Before start of installation

1. Check the limits for tip load, considering the weight of the Compacttilt and the extended range, which may make it necessary to reduce the volume of the bucket.
2. Place the carrier on a level and non-slip surface.
3. Place the bottom of the Compacttilt on a flat and non-slip surface, making sure the tilt is in neutral position (**Figure 1**).
4. The digging arm is moved into position so that the arm can be lowered against the Compacttilt without contact.



**Figure 1**

## Installation



**Figure 2**

Position the link arm so that its pinhole hole is flush with the mounting holes in the attachment (**Figure 2**).

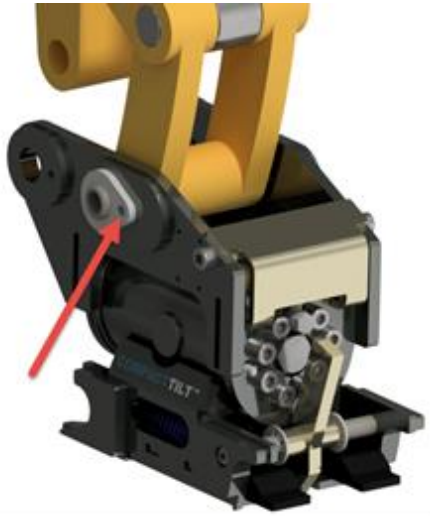


Figure 3

Fit the pin bolt of the link arm and lock it with a bolt or locking pin in the transverse mounting hole (**Figure 3**).

**Note.** Use the included pin bolts (if included).

Lower the main arm into the attachment until its pinhole aligns with the mounting hole in the attachment. The arm is locked with a pin bolt corresponding to the link arm (**Figure 4**).


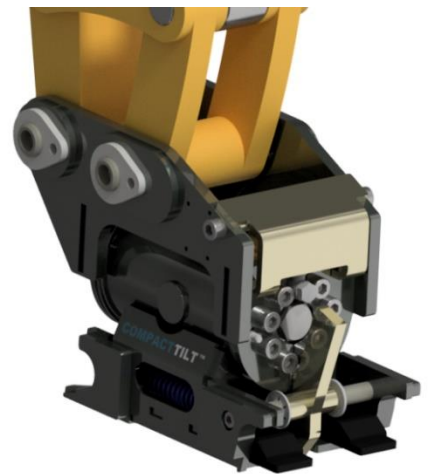


Figure 4

## Inspection for unwanted contact between machine and coupler

It's recommended to look for interference between tilt and boom. Position 1,2,3 and 4 shows where it typically can occur. If no contact is detected, then proceed with the installation.


In case of any deviations, please contact Compacttilt on [Service@compacttilt.com](mailto:Service@compacttilt.com)

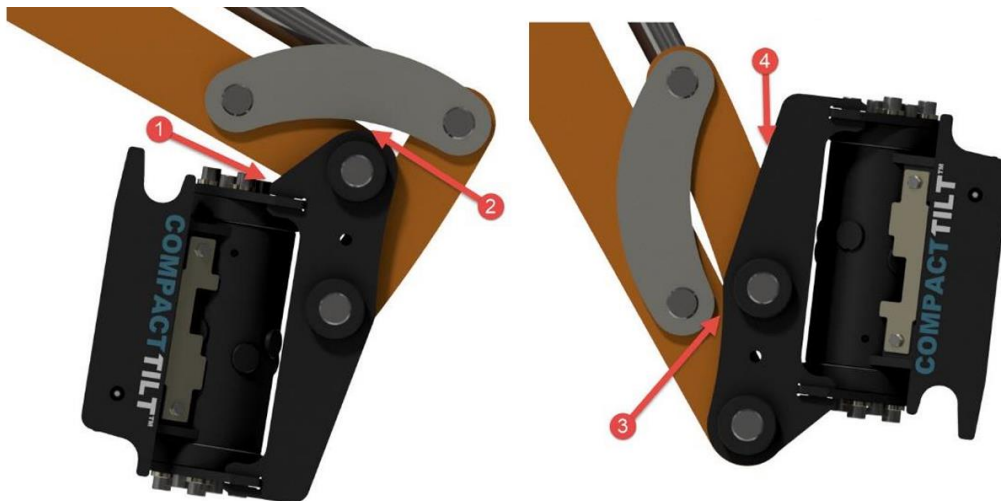

## Hydraulic Installation

Before starting the installation of hydraulic hoses, the machine must be switched off and the hydraulic system pressureless. Hoses are installed so that there is no squeezing or risk of squeezing when using the machine and connected equipment.

### Connection tilt

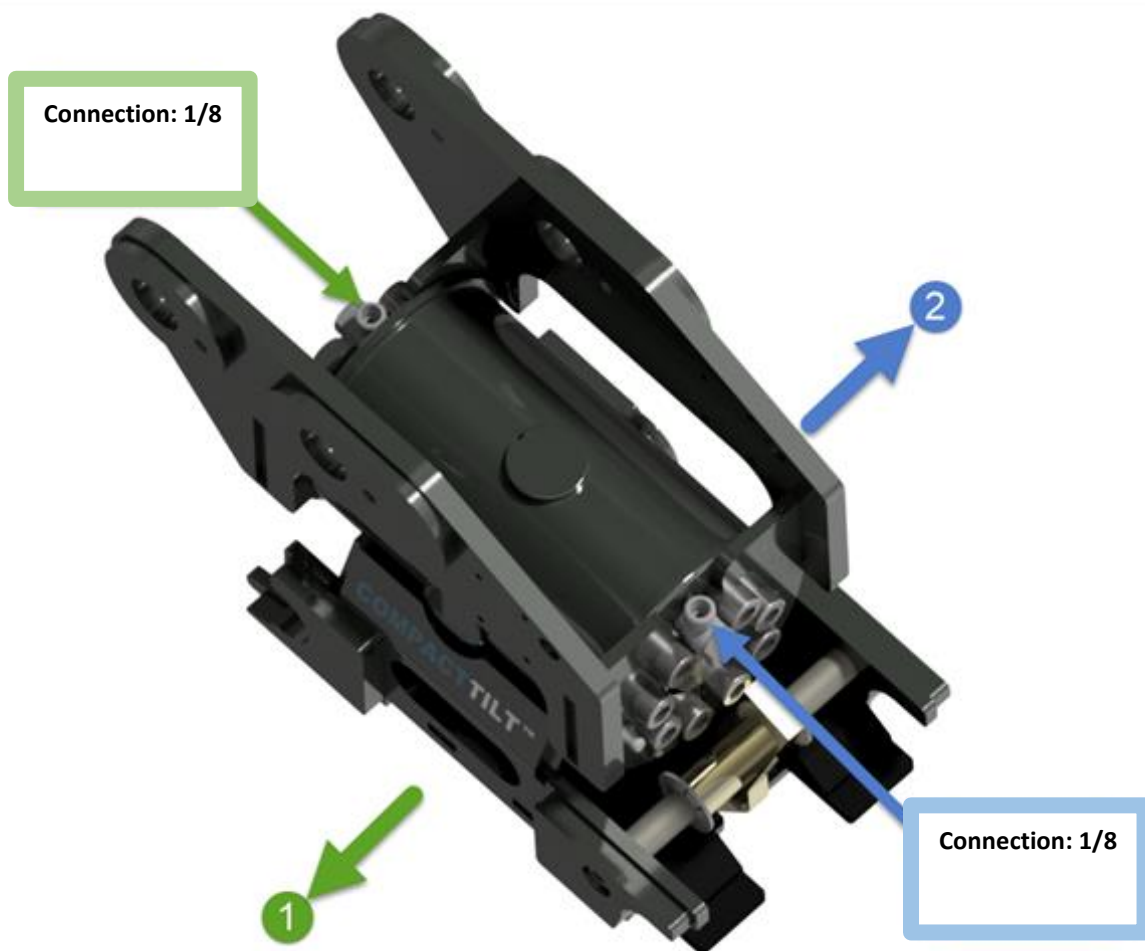


### Inspection of installation:

1. Ensure the Compacttiltet functions correctly.
2. Ensure that hoses aren't at risk of getting squeezed, cut or pulled.
3. Check for hydraulic leaks.
4. Inspect that bolts are correctly tightened [See the instructions of the carrier machine].
5. Ensure that the machine attachment is correct for the carrier machine [see product type plate].
6. Ensure the coupler fully locks.

## Steering range - Compacttilt

Compacttilt has the following tilt angle that must be taken into account:

Tilt range is 2 x 50° (*Figure 5*)

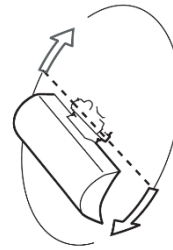

2 x 50°

*Figure 5*

## Use of semi-automatic quick coupler


Before equipment can be connected to the quick coupler, the coupler lock must be in an unlocked position. This is done by mounting the supplied release tube on the quick-release actuation arm (*Figure 6*).



*Figure 6*

The release tube is pushed down until it stops, bringing the locking wedge to an unlocked position (*Figure 7*).

The release tube can now be removed and the lock remains in the unlocked position.

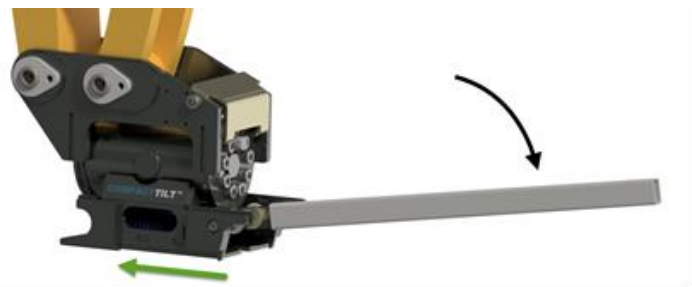

*Figure 7*

## Connection of equipment

The equipment to be connected must be located so that the Compacttilt's fork eyes can catch.

The forks of the Compacttilt engage the coupling shaft of the equipment (**Figure 8**).



Figure 8



Figure 9

When the equipment is swung into place on the Compacttilt's coupler, the equipment's shaft strikes the shutter release lever, thereby activating the lock (**Figure 9**).

The machine is now ready for use with the attached equipment (**Figure 10**).



Figure 10

## Lifting Hook - Use and limitations

This illustration (**Figure 11**) is taken from the standard DS / EN 474-1, which describes how to lift the hook (**Figure 12**) must be used. See the inscription on the hook for max. capacity load.

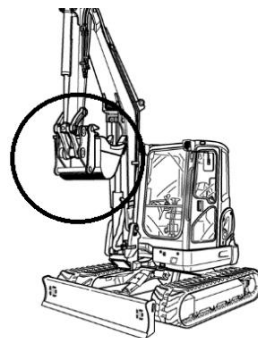


Figure 11



Figure 12

## Maintenance

### During daily inspection and maintenance, check:

- Weekly lubrication of end bearings. Course of action:
  - Tilt all the way to one side and give 1-2 presses to the grease nipple at each end of the tilt.
  - Tilt all the way to the opposite side, and also give 1-2 presses on the grease nipple at each end of the tilt.
- Threads are intact.
- Eyes and bolts are not broken
- No loose screw joints
- No cracks or fractures
- Ensured that the machine attachment is clean, mounted and clamped correctly
- The Compacttilt is correctly mounted between the carrier and the implement
- There is no hydraulic leak
- There is no grease leakage on hoses or in couplings

### Every month or when needed for inspection and maintenance:

- All bolts and screws are inspected and tightened
- Check for unusual wear
- Cleaning of hoses and couplings
- Check for abnormal play. If play exceeds 2 degrees, contact your dealer for service.

**Service every 500 hours in use, or at least once every year.**

### Tightening torque:

Bolt size [mm]	Torque [NM] (10.9 bolts)	Torque [NM] (12.9 bolts)
M5	8.1	9,7
M6	14	17
M8	33	40
M10	65	79
M12	114	136
M14	181	217
M16	277	333




## Lubrication overview

For lubrication of the Compacttilt, it is recommended to use: **Castrol Molub-Alloy 370-2**  
Lithium-based high-pressure grease with min. 3% molybdenum disulphide (MoS<sub>2</sub>) EP additives in NLGI 2.

Spec.:            -DIN 51502    KF2K-25  
                      -ISO 6743-9    ISO-LXCCIB2

**Greases containing graphite and copper must not be used.**

Always ensure that the lubrication nipples are free of dirt before lubrication is carried out.

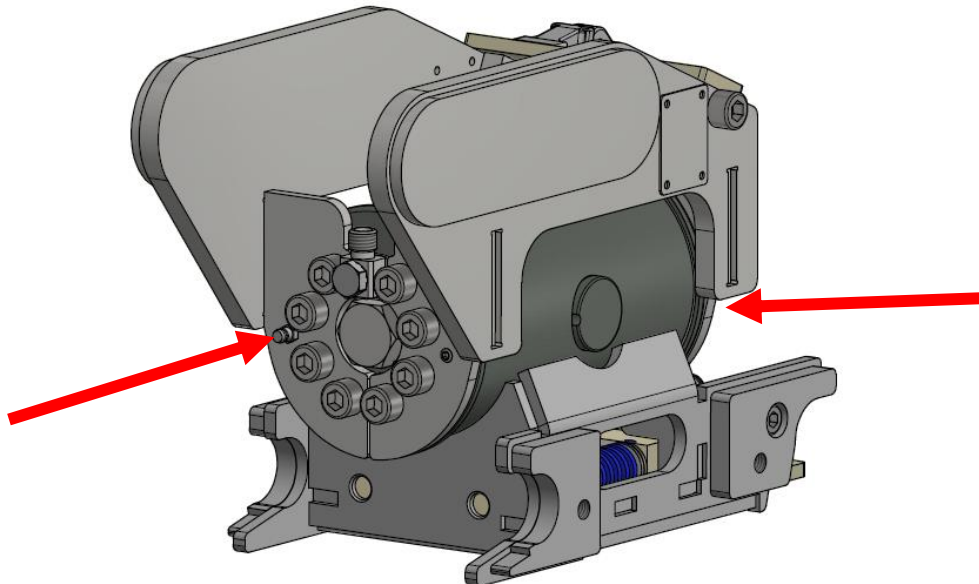

## Spare part list

Contact your machine dealer if you have a request for spare parts for Compacttilt.

# CT

Become a part of  
Compactilt's forum:



You can see many  
more pictures here:



Watch all movies from  
Compactilt™ here:



Link you to  
Compactilt's network here:

