COMPACT TILT



SEE RECOMMENDATIONS OF FOCUS AREAS

3 FOCUS AREAS

THE FULL USER, SERVICE AND DOCUMENTATION GUIDE IS SUPPLIED WITH YOUR PRODUCT.
HERE ARE A FEW SELECTED POINTS FROM IT.



SETTING UP CT PRODUCT (GENERALLY)

- Warranty registration on CT dealer portal made, with a review of the function test scheme.
- Rotation speed is set to a minimum of 8 sec
- Max machine pressure 220 bar.
- Pay attention to the use of the correct hose dimension.
- Installation of electricity is carried out in supplied/hose bags.



IN USE

- Lubrication must be carried out daily / 8th operating hour.
 (lubricant overview is in the accompanying documentation). *1
 A Compacttilt product cannot be overlubricated.
- Note: if a leveling bucket is used that is too wide, the tiltrotator can be subjected to overload.
- Check for kinks/breaks on hoses this will indicate something has pinched.
- When replacing hoses pay attention to the correct use of dimensions.
- Ensures that shielding is intact it protects the exposed parts.
- No use of hydraulic hammer on tiltrotators.
- Ensure correct use of pallet forks so that unnecessary overloading does not occur. *2
- Lifting hook is used by ensuring that shielding is free from lifting straps. *3



SERVICE INTERVAL

When carrying out a registered service inspection at 500 hours or 12 months (whichever comes first) +12 months warranty is obtained. Service must be registered and performed by your machine dealer - and let it follow the machine's normal service interval with advantage. The user manual contains a complete overview of instructions for maintenance.

Tightening torque table for Compacttilt products:

Bolt size [mm]	Torque [NM] (10.9 bolts)	Torque [NM] (12.9 bolts)
M5	8.1	9,7
M6	14	17
M8	33	40
M10	65	79
M12	114	136
M14	181	217
M16	277	333

5 pump strokes every 8 hours CT Service mark is applied to the machine! Contact your machine dealer for an agreement on service.



*1: Grease containing graphite and copper must not be used. It is secured that the grease gun and grease nipples are free for dirt before lubrication is carried out.



