

Guidelines for steps in the HS2 touchscreen

SVAB startup screen

Access the menu via the icon:



Note: There are 2 pages in the menu for settings

Menu Page 1:

- **Speed:** Adjusting speed
- **Brightness:** Adjusting screen brightness
- **Profile:** Choosing a profile if there are multiple users
- **Layout:** Overview of buttons and rollers
- **Angular gauge:** Not in use
- **Troubleshoot:** Error codes and troubleshooting



Menu Page 2:


- **System Info:** Information about the system
- **Language:** Choosing language
- **Track Steering:** Choosing machine driving mode (added option)



Below, each menu function is reviewed


Speed: Adjusting Speed

- Select function from the drop-down menu (C)
- Adjust the % for the selected function (D)
- Accept the setting with

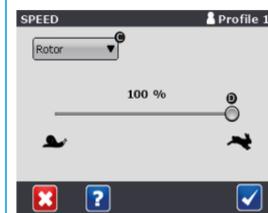


Brightness: Adjusting Screen Brightness

- Select day (E) or night (F)
- Adjust on (G)
- Screen off time is adjusted on (H) until the screen turns off (if there is a system error, the screen will not turn off)

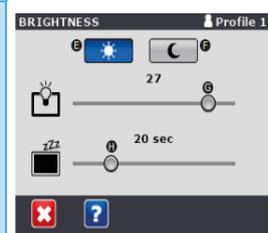

Profile: Choosing a profile if there are multiple users

- Select Profile (I)
- Change the profile name using the drop-down menu (J)
- Enter a new name and accept the setting with

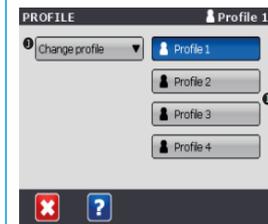


Layout: Overview of buttons and rollers

Page 1: Left joystick


Information about functions of buttons and rollers

Page 2: Right joystick

Information about functions of buttons and rollers

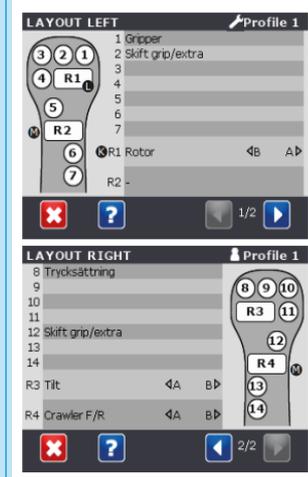

Angular gauge: not in use

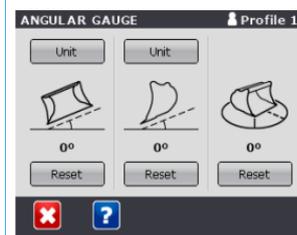

Troubleshoot: Error codes and troubleshooting (consists of multiple pages)


Page 1

- View error code by pressing (P), the error code can be read




Page 2

- View old error codes, they can also be read and deleted

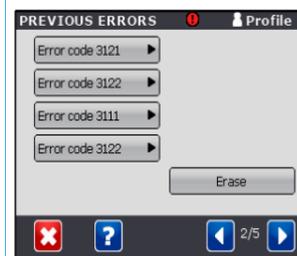


Page 3

- See which buttons are pressed and how much the roller is activated

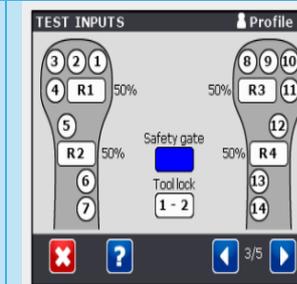


Page 4

- Here, functions are activated as well as the setting for the degree of activation

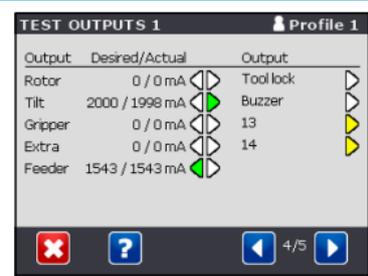

System Info: Information about the system

4 pages with product information

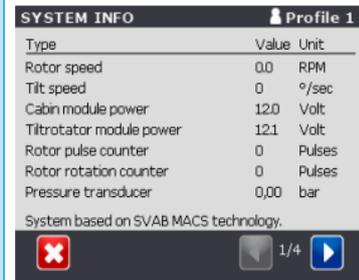

Language: Choosing language

- Select the desired language and accept the setting with ✓



Track Steering: Choosing machine driving mode (optional)

- Select steering mode on (M)
- There may be an activation button on the joystick – see joystick layout
- On the right side of the screen, the activated functions are displayed

